

























## DM100 Configuration Codes (v2.2)

Function	Value	Code
<b>Product Settings</b>	Reset Scanner to Factory Defaults	
<b>Reset</b>	Reboot Scanner	
<b>Untrain</b>	Untrain Code	
<b>Diagnostics</b>	Output Diagnostic String	
<b>Trigger Type</b>	Enable Single (external)	
	Enable Presentation (internal)	
	*Enable Manual (button)	
<b>Symbology Settings</b>	*Enable Data Matrix	









## DM100 Configuration Codes (v2.2)

Function	Value	Code
<b>Symbology Settings</b>	Disable Data Matrix	
	Enable QR Code	
	*Disable QR Code	
	*Enable Code 128	
	Disable Code 128	
	*Enable UPC/EAN	
	Disable UPC/EAN	
	*Enable Code 39	









## DM100 Configuration Codes (v2.2)

Function	Value	Code
<b>Symbology Settings</b>	Disable Code 39	
	*Enable Code 93	
	Disable Code 93	
	*Enable Interleaved 2 of 5	
	Disable Interleaved 2 of 5	
	*Enable Codabar	
	Disable Codabar	
<b>Data Validation / Data Formatting</b>	Enable DoD UID Validation with UII Output (for Data Matrix only)	









## DM100 Configuration Codes (v2.2)

Function	Value	Code
<b>Data Validation / Data Formatting</b>	*Disable DoD UID Validation with UII Output (for Data Matrix only)	
<b>Non-Printable Characters</b>	Enable Translate Unprintable Chars	
	*Disable Translate Unprintable Chars	
<b>Wake-up Message</b>	Enable Output Diagnostic String on Wake-up	
	*Disable Output Diagnostic String on Wake-up	
<b>Connection Type</b>	*RS-232 / USB-COM	
	USB-Keyboard	
<b>RS-232 Baud Rate</b>	9600 BPS	



## DM100 Configuration Codes (v2.2)

Function	Value	Code
<b>RS-232 Baud Rate</b>	19200 BPS	
	38400 BPS	
	57600 BPS	
	*115200 BPS	
<b>RS-232 Word Length</b>	7 Data, 1 Stop, Even	
	7 Data, 1 Stop, None	
	7 Data, 1 Stop, Odd	
	7 Data, 2 Stop, Even	

## DM100 Configuration Codes (v2.2)

Function	Value	Code
<b>RS-232 Word Length</b>	7 Data, 2 Stop, None	
	7 Data, 2 Stop, Odd	
	8 Data, 1 Stop, Even	
	*8 Data, 1 Stop, None	
	8 Data, 1 Stop, Odd	
<b>Keyboard Country</b>	*USA	
	Germany	
	France	

## DM100 Configuration Codes (v2.2)

Function	Value	Code
Keyboard Country	Spain	
	Japan	

\* - default setting